


Digital Control Panel - With Engine Off

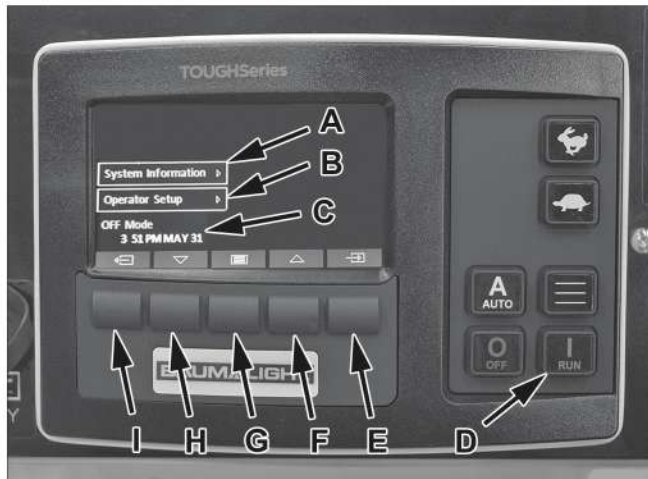

Note: The auto button and throttle buttons (rabbit and turtle) are not functional in this application.

- A. System Information - Press to view firmware version, serial number and events log.
- B. Operator Setup - Press to view/edit display options, date and time settings.
- C. Date Stamp.
- D. Run - Press to start engine.
- E. Enter Key/Select.
- F. Scroll Up - Press to scroll up the menu.
- G. Enter Settings Menu.
- H. Scroll Down - Press to scroll down the menu.
- I. Back Key - Press to go back one function.

Digital Control Panel - With Engine On



Note: The auto button and throttle buttons (rabbit and turtle) are not functional in this application.

- A. Engine RPM
- B. Scrolling Engine Parameters
- C. Event Message
- D. Display Toggle - Press to show only the battery voltage, engine temperature and hydraulic oil temperature. Press F to continue scrolling.
- E. Stop - Press to stop engine.
- F. Lock/Auto Scrolling Parameters (Changes back to show all parameters).
- G. Scroll Up - Press to scroll up the engine parameters.
- H. Scroll Down - Press to scroll down the engine parameters.

Engine Throttle

Move the control rearward to increase the engine speed and forward to decrease speed.

Park Brake

Move switch forward to engage the park brake. Move switch rearward to release park brake.